



Sub-Zero Filler Strip Installation (9009251 & 9009252)

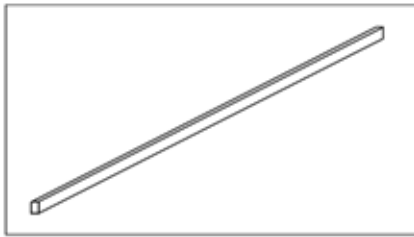


1) Filler 9009251 50 x 70 x 2130mm
or: Filler 9009252 50 x 70 x 2028mm



2) L-Bracket

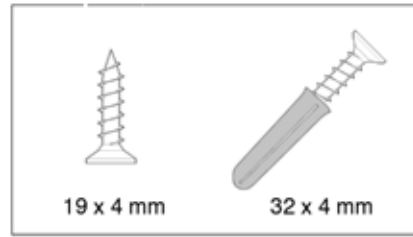

3) Self Tapping Screws (7x)
Anchor Screws (3x)

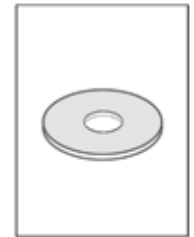

4) Washers (6x)

Note:

First decide on the spacing you require for your particular installation. When fitting a bespoke grille, leave 36mm of stainless filler visible between the 2 trims of the units by spacing out with the washers provided. The gap can be closed tighter if you wish & the filler can sit tightly behind the trims that will leave around 30mm of filler exposed. Sub-Zero units vary slightly from model to model on the depth of the trims so there must always be room for small tolerances.

Installation Instructions:

- 1) Place the stainless steel filler strip directly behind the frame of the Sub-Zero. The top of the filler must line up with the top of the Sub-Zero (Image 1)
- 2) Open the ventilation grille and using the holes in the side of the grille hinge assembly (Image 2), mark 2 hole positions on the filler, to drill holes later.
- 3) Place the L-shape bracket on the floor, with the short side of the L facing inwards. Filler 9009251 will extend all the way to the floor, 9009252 stops at plinth height to allow for installation of the continuous plinth and is held up from the floor by the L-Bracket (refer to page 2).
Mark the 3 hole positions on the floor and on the filler (Image 3).
- 4) Drill the marked holes and secure the L- bracket to the filler strip, using the self tapping screws provided.
- 5) Remove the protective film.
- 6) Using the self tapping screws, secure the filler strip to the Sub-Zero unit, from the inside of the ventilation grille. When also installing a custom ventilation grille, use the washers provided inbetween the outside of the Sub-Zero and the inside of the filler, to ensure the visible part of the filler in the gap between the two Sub-Zero's will measure 36mm.
- 7) Secure the L-Bracket to the ground using the anchor screws provided.
- 8) Position the second Sub-Zero unit. Level and line-up the Sub-Zero units using the height adjustable feet. Fit the extra length ventilation grille (if ordered). Secure the filler strip through the grill hinge plate of the second Sub-Zero, using the screws and washers provided.

Image 1



Image 2

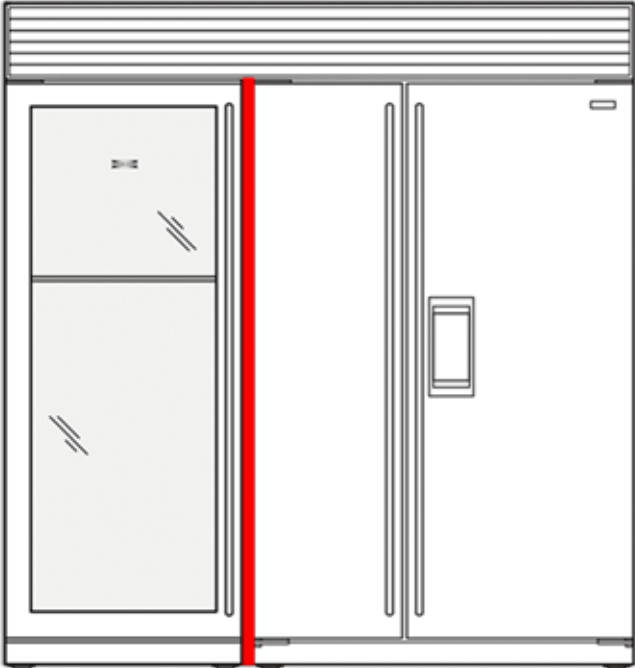


Image 3




Filler Strip 9009251 - For Dual Installations without continuous plinth

FRONT VIEW




SIDE VIEW

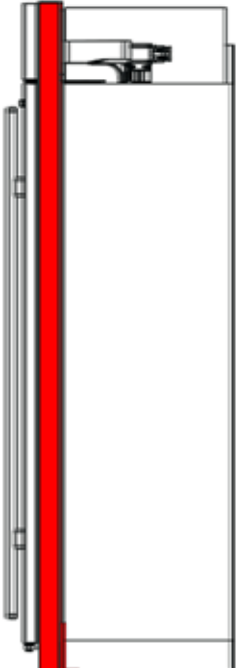

Filler Strip 9009252 - For Dual Installations with continuous plinth

FRONT VIEW

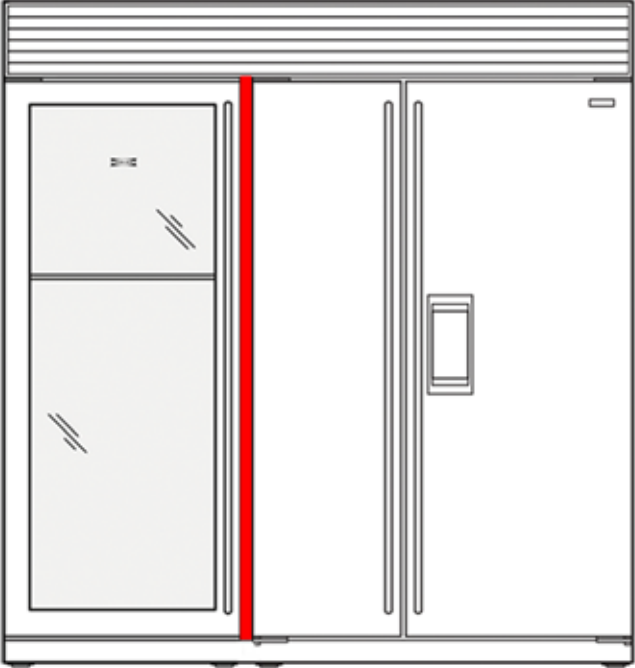

SIDE VIEW

